

 
## INSTALLING BATTERIES

The Super Street™ Acura® RSX® requires a 7.2-volt rechargeable nickel-cadmium (Ni-Cd), or nickel-metal-hydride (Ni-MH), battery pack and battery charger (not included). The transmitter requires one 9-volt battery (not supplied). The rechargeable battery pack and battery pack charger, as well as alkaline battery, are available at your local RadioShack store.

### IN THE CAR

1. Use a coin to turn the latches on the battery compartment cover toward **OPEN**. Lift and remove the cover.
2. Place the battery pack in the compartment. Attach the battery pack's white plastic connector to the car's matching connector. Do not force them together. They only fit one way.
3. Replace the cover and turn the latches to secure it. When the car moves slowly or does not move at all, recharge the car's battery pack.

### IN THE TRANSMITTER

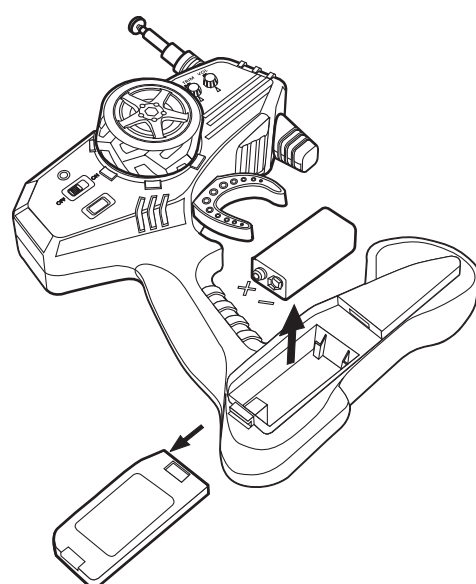


Remove the battery compartment cover and place the battery in the transmitter as indicated by the polarity symbols (+ and -) marked inside. Replace the cover. When the transmitter's range decreases, replace its battery.

#### BATTERY NOTES

 - Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the car for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## DRIVING THE CAR

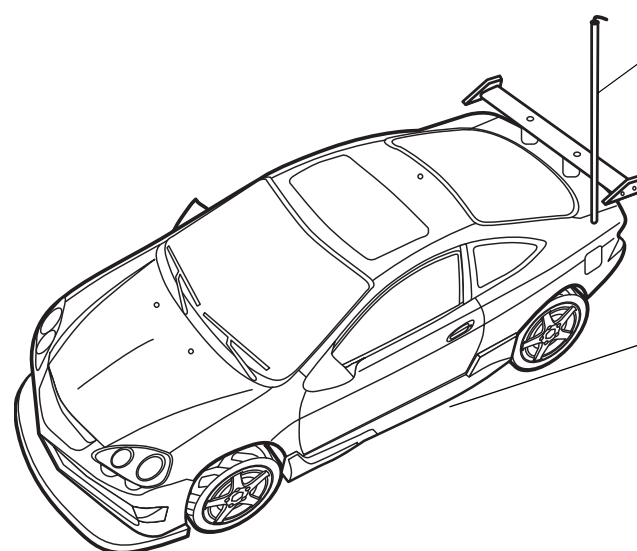

**Antenna Tube** — The supplied plastic antenna tube holds up the antenna wire for the best reception and range. Route the antenna wire's loose end through the tube. Then insert the tube securely into the car's tube holder.

**ON/OFF** — Slide to **ON** to activate the car and drive it. Slide to **OFF** when you are finished driving the car.

**Antenna** — Extend the antenna to its full length before driving the car. For maximum range, hold the transmitter with the antenna as high as possible and point it straight up. Retract the antenna when you are finished driving the car.

**Steering Wheel** — Use the steering control wheel to turn left and right. The farther you steer the steering wheel, the tighter the car turns. Release it to make the car go straight.

**TRIM VOL ST** — Adjusts the wheel alignment so that the car drives in a straight line.

**LED Indicator** — Lights when the transmitter is on.


**ON/OFF** — Slide to **ON** to activate the transmitter and drive the car. Slide to **OFF** when you are finished driving the car.

**TRIM VOL F/R** — Adjusts the throttle trim so that the car stops completely when the throttle trigger is released.

**Throttle Trigger** — Drive the car using the throttle trigger to move forward and backward. Pull all the way to the left for maximum forward speed. Push to the right to move backward. Release to stop.

## ADJUSTING THE THROTTLE TRIM

 1. Place the car on a box or a wooden block so its tires do not touch the ground. Do not touch the tires during this adjustment.

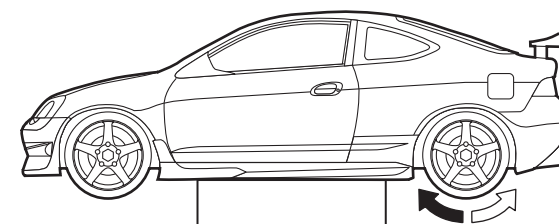


2. Slide **ON/OFF** on the transmitter and car to **ON**.

3. If the rear tires begin to move, turn **TRIM VOL F/R** on the transmitter clockwise or counter-clockwise until the tires stop.

## ADJUSTING THE STEERING TRIM

 1. Place the car on a box or a wooden block so the tires do not touch the ground. Do not touch the tires during this adjustment.

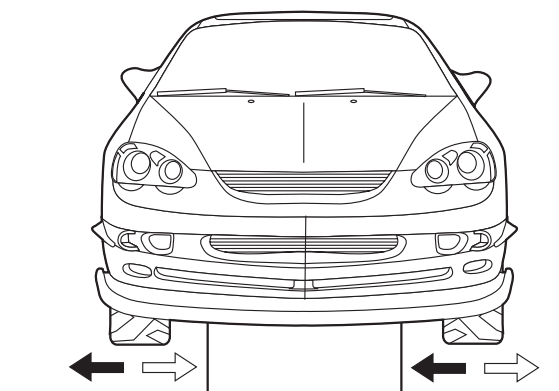


2. Slide **ON/OFF** on the transmitter and car to **ON**.

3. If the front tires angle left or right, turn **TRIM VOL ST** on the transmitter clockwise or counter-clockwise until the wheels point directly forward.

#### CAUTION

 This car can reach much higher speeds than most other radio-controlled cars. Be careful to avoid high-impact collisions with people and objects.

The box wrench supplied with your car lets you remove and replace the front and rear wheels. Be careful not to discard the box wrench when you unpack the car.

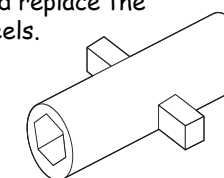

CARE

Keep the car dry; if it gets wet, wipe it dry immediately. Use and store the car only in normal temperature environments. Handle the car carefully; do not drop it. Keep the car away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your car is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the car's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your car.

 
Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


INSTALLING REPLACEMENT PARTS

You can order a replacement wheel set for your car at your local RadioShack store.

INSTALLING A FRONT WHEEL

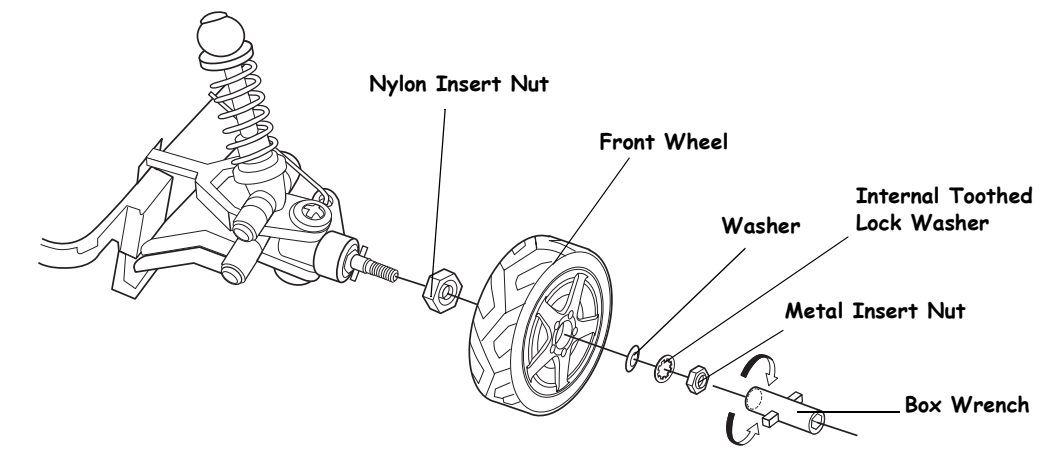

INSTALLING A REAR WHEEL

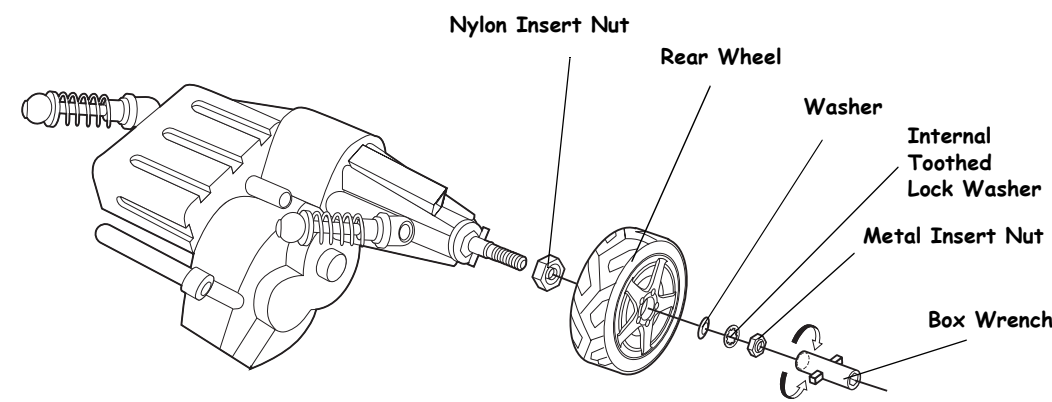 

Recommended Age .....	12 and up
Scale .....	1:10
Speed .....	1300 feet/minute

RACING TWO OR MORE CARS TOGETHER

Radio-controlled cars use specific frequencies to operate. Cars with different frequencies can race together. Cars with the same frequency cannot. The following chart shows the frequencies available for this car. If you buy more than one car and you plan to race them, be sure the sticker (showing the band number) on each car is a different color to ensure that they use different frequencies.

Sticker Color/ Band Number	Transmitter Frequency (MHz)	Car Frequency (MHz)
Brown (1)	26.995	26.540
Orange (3)	27.095	26.640
Yellow (4)	27.145	26.690

! IMPORTANT !

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/ restrictions in your area. RadioShack's involvement in this program is part of our company's commitment to preserving our environment and conserving our natural resources.

CAUTION

**Driving the Car**

- Do not drive the car through puddles or in the rain, sand, or snow. Doing so can damage the car.
- To extend the car's life, rest the car for 20 minutes after every 15 minutes of continuous use.
- If the car gets stuck under an object, immediately set **ON/OFF** on the transmitter to **OFF**, then retrieve the car.
- Running your car continuously for long periods generates high heat levels.
- Heat causes wear and tear on the motor. To help keep heat levels down, when your car's battery pack runs down, let the car cool for at least 10 minutes before installing a new or newly charged battery pack.

**Adjusting the Throttle Trim**

- Never use the throttle trim to make the car go. It is for adjustment only.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99